



# Sunshine State Security, LLC.

8815 Conroy Windermere Rd. Suite 207 Orlando, FL. 32835

OFFICE: (407) 226-8844 TOLL: (888) 646-SAFE - LICENSED, BONDED, INSURED - ORLANDO, FL. EG0000209

## DSC Model Alarm Systems

### To ARM the system and go AWAY

- Secure all doors and windows.
  - Green READY light or check mark should be on
- Enter your 4-digit-code or press AWAY button or symbol.
  - Red ARMED light should be on and beeping
- Immediately exit through a delay door.



### To ARM the system and STAY in building

- Secure all doors and windows.
  - Green READY light or check mark should be on
- Press HOME button or symbol.
  - Red ARMED light should be on (no beeping)



### To ARM the system in NIGHT/INSTANT mode.

- Secure all doors and windows.
  - Green READY light or check mark should be on
- Press the \* button then the 9 button.
- Enter your 4-digit USER code.
  - System is immediately ARMED with NO DELAY.



### To DISARM the system

- Enter building through a delay door.
  - Control station will beep to remind you to disarm the system
- Enter your 4-digit code.
  - Red ARMED light should go off

### To CHANGE a MASTER code

- Press the \* button then the 5 button.
- Enter the current 4-digit MASTER code.
- Enter 40.
- Enter the new 4-digit MASTER code.
- Press the # button to exit programming.

### To CHANGE a USER code

- Press the \* button then the 5 button.
- Enter the current 4-digit MASTER code.
- Enter the desired 2-digit USER code (01, 02, etc.) you wish to change.
- Enter the new 4-digit USER code.
- Press the # button to exit programming.

### To DELETE a USER code

- Press the \* button then the 5 button.
- Enter the current 4-digit MASTER code.
- Enter the desired 2-digit USER code (01, 02, etc.) you wish to delete.
- Press the \* button to delete that USER code.
- Press the # button to exit programming. [DO NOT delete the MASTER code]

### To activate EMERGENCY alarm

- Press emergency button corresponding to the emergency type for 2 seconds.

### To SILENCE and view trouble condition

- Press the \* button then the 2 button.
 

Lights indicate the trouble type as follows:

  - #1 call for service
  - #2 loss of incoming power
  - #3 telephone line trouble
  - #4 failed to call Central Station
  - #5 zone not normal
  - #6 zone transmitter tamper not normal
  - #7 zone transmitter low battery
  - #8 time/date need reset

### To turn the DOOR CHIME ON/OFF

- Press the CHIME button for 2 seconds.
- Press the # button to return to ready state.



### To BYPASS a ZONE

- Press the \* button then the 1 button.
- Press the 2-digit zone number (01, 02, etc.) to bypass.
- Press the # button to return to the ready state.
- Arm the system in STAY or AWAY mode as desired.

### To CHANGE the system TIME/DATE

- Press the \* button then the 6 button.
- Enter the 4-digit MASTER code.
- Press the 1 button.
- Enter time and date in following format: HH (24 hr) MM (minutes) MM (month) DD (day) YY (year)
- Press the # button to exit programming

### To clear MEMORY LIGHT

Contact us if you are unaware of the recent alarm activation causing the MEMORY light. To clear:

- ARM the system by entering any valid 4-digit USER code.
- DISARM the system by entering any valid 4-digit USER code.
  - MEMORY light should now be off.

**PLEASE MAKE NOTE OF WHICH STATUS LIGHTS ARE ON BEFORE YOU CALL FOR SERVICE**

**WE ARE HERE LOCALLY WHEN YOU NEED US**